

# MOUNTING AND INSTRUCTION MANUAL

# **Multi Signal Converter MSC**

# Cascadable Signal-Converter / Distributor

Article No. 133286 without fiber optic (FO) Article No. 133287 with fiber optic input and output (FO IN, OUT)

Please read these instructions carefully before installation.





STANDARDS

The Multi Signal Converter was developed and produced in accordance with the EU Guidelines

2004 / 108 / EC 96 / 48 / EC

#### **References to the Instruction Manual**

- 1. The information in this Instruction Manual can be changed at any time without notice. The current version is available for download at www.mobatime.com.
- 2. This Instruction Manual has been composed with the utmost care, in order to explain all details in respect of the operation of the product. Please do not hesitate to contact us if you have any questions. Thank you for reporting any possible mistakes.
- 3. We do not answer for direct or indirect damages which could occur when using this manual.
- 4. Read the instructions carefully. Only start setting-up the product if you have understood the information for installation and operation.
- It is prohibited to copy this publication or to store it on a computer system. All rights reserved. Copyright © BÜRK MOBATIME GmbH D-78026 VS-Schwenningen / GERMANY and MOSER-BAER AG CH 3454 Sumiswald / SWITZERLAND.

# Content

1	S	Safety	4	
	1.1	Safety instructions	4	
	1.2	Symbols and Signal Words used in this Instruction Manual	4	
	1.3	Intended use	4	
	1.4	Observe operating safety!	5	
	1.5	Consider the installation site!	5	
	1.6	Observe electromagnetic compatibility!	5	
2 Maintenance		laintenance	6	
	2.1	Troubleshooting: Repairs	6	
	2.2	Cleaning	6	
	2.3	Disposing	6	
3 General Information: Introduction		General Information: Introduction	7	
	3.1	Scope of delivery	7	
	3.2	Appropriate accessories - Mains power supply	7	
	3.3	Function description	7	
4	С	Configuration, Displays and Connections8		
5	A	Application examples and circuits		
6	D	Detailed wiring examples of the inputs and outputs	10	
7	Т	Technical data		
8	Dimensions15			

#### 1.1 Safety instructions



Read this chapter and the entire instruction manual carefully and follow all instructions listed. This is your assurance for dependable operations and a long life of the device. Keep this instruction manual in a safe place to have it handy every time you need it.

#### **1.2** Symbols and Signal Words used in this Instruction Manual

	<b>Danger!</b> Please observe this safety message to avoid electrical shock! There is danger to life!
	Warning! Please observe this safety message to avoid bodily harm and injuries!
	Caution! Please observe this safety message to avoid damages to property and devices!
İ	<b>Notice!</b> Additional information for the use of the device.

#### 1.3 Intended use

The **Multi Signal Converter** is a device, which can be used to convert and distribute DCF signals.

However, it can also be used for other types of signals. The limitation is given by the frequency of the signals and the signal form. Ideally, the device is used for digital signals. See also chapter 7 Technical data.

Please refer to section - 3.3 Function description - for a detailed function description.



#### 1.4 Observe operating safety!

- Never open the housing of the device! This could cause an electric short or even a fire, which would damage your device. Do not modify your device!
- The device is not intended for use by persons (including children) with limited physical, sensory, or mental capacities or a lack of experience and/or knowledge.
- Keep packaging such as plastic films away from children. There is the risk of suffocation if misused.

#### **1.5** Consider the installation site!

- To avoid any operating problems, keep the device away from moisture and avoid dust, heat, and direct sunlight. Do not use the device outdoors.
- The Multi Signal Converter is designed for DIN rails and should only be operated installed on a DIN rail.



#### Danger! Make sure

that you wait before using the device after any transport until the device has reached the ambient air temperature. Great fluctuations in temperature or humidity may lead to moisture within the device caused by condensation, which can cause a short.



#### Observe electromagnetic compatibility!

The device complies with the requirements of EMC directive 2004/108/EC and 96/48/EC

#### 2 Maintenance

#### 2.1 Troubleshooting: Repairs

If you cannot rectify the problems, contact your supplier from whom you have purchased the device.

Any repairs must be carried out at the manufacturer's plant.

Disconnect the power supply immediately and contact your supplier, if ...

- liquid has entered your device
- the device does not properly work and you cannot rectify this problem yourself.

#### 2.2 Cleaning

- Please make sure that the device remains clean especially in the area of the connections, the control elements, and the display elements.
- Clean your device with a damp cloth only.
- Do not use solvents, caustic, or gaseous cleaning substances.

#### 2.3 Disposing



#### Device

At the end of its life cycle, do not dispose of your device in the regular household rubbish. Return your device to your supplier who will dispose of it correctly.



#### Packaging

Your device is packaged to protect it from damages during transport. Packaging is made of materials that can be disposed of in an environmentally friendly manner and properly recycled.

## **3** General Information: Introduction

#### 3.1 Scope of delivery

Please check that the delivery is complete and notify your supplier within 14 days of receipt of the delivery if it is not complete.

In the package purchased by you, you have received:

• Multi Signal Converter for DIN rail mounting

#### 3.2 Appropriate accessories - Mains power supply

Mains power supply suitable for Multi Signal Converter for mounting on DIN rails:

HDR 15-24 from Meanwell (24VDC / 15W)

HDR 30-24 from Meanwell (24VDC / 30W)

Other power supply can also be used.

Minimum requirements: 24VDC smoothed und stabilized, min. 100 mA



### 3.3 Function description

- Wide power input voltage range 12 60 VDC.
   Either via DC Input or external DIN Rail Power Supply.
- Several inputs, current or voltage controlled. Option: optical input (820nm / ST Port)
- 4 galvanically separated outputs for current or voltage interfaces, 1 TTL or RS422 output (single or differential useable).
   Option: optical output (820nm / ST Port)
- Cascading possible, without relevant delay of the current loop outputs
- Very low signal propagation delay
- DC Out for GNSS receiver or cascaded devices, limited to 30V (@ UIN >30V).
- 2 LEDs for supervision: power and input signal
- Replaces DCF-Multi-4 and 10x-DCF-Multiplexer



# 4 Configuration, Displays and Connections

0	DC IN	Power input, nom. 24VDC / < 100mA (12V-60V) Remark: Correct +/- polarity required. Internal thermical fuse	
0	DC OUT	Directly wired to DC IN. Used for power cascading to next converter.	
₿	SUP ANT	Power output for power supply of the GPS/GNSS receiver. Same voltage as DC IN but limited to 30VDC.	
4	DCF ANT	DCF input, active current loop input. For the connection of a GNSS receiver (with DCF current loop out) or any other DCF source. 30V / 30mA, current limited, min signal level: approx. 6 mA	
6	SIG IN	Voltage signal input 2-24V, potential against GND, inverted (-) resp. none- inverted (+),or differential connection (RS422) Ref.: Out 2.5VDC, used to define the unused input (+ or -)	
0	DCF OUT	<ul> <li>4 galvanically separated outputs for current or voltage interfaces:</li> <li>Passive current loop interface 12mA max. 30V</li> <li>"Open Collector" application 3-30V</li> </ul>	
0	TTL OUT	Signal output 5V, transparent resp. inverted or as RS422 output Signal cascading to next "Multi Signal Converter"	
8	FO IN / OUT	<b>Option:</b> Fiber optic in- and output 1Hz - 10MHz (820nm / ST Port)	
Ø	SIG INV	Inversion of the output signals "DCF OUT" and " <u>FO</u> OUT" Jumper position: "OUT" = Signal transparent, "OUT" = Signal invertiert	
0	LED's	<b>green:</b> power supply <b>yellow:</b> signal activity (DCF, SIG IN, FO IN). Flashes to the beat of input signal or with approx. 20Hz at higher frequency	



# 5 Application examples and circuits



# 6 Detailed wiring examples of the inputs and outputs



#### Wiring of the signal input (voltage controlled)



#### Wiring receiver input (current controlled)





#### Wiring of the TTL Output



#### Posibilities for signal conversions:

The inputs and outputs can be combined as desired, thus a variety of signal conversions can be created. Following some examples:

Current – voltage converterDCF IN $\rightarrow$ 24V PLC	
Current – fiber-optic converter $DCF IN \rightarrow Optical transmission to 2. Multi Signal Converter$	r
Voltage – voltage converter $TTL IN \rightarrow 24V PLC$	
Voltage – current converter Clock line (e.g. DCF active) $\rightarrow$ CurrentLoop OUT	
Data – fiber-optic converter RS 422 → Optical transmission to 2. Multi Signal Converter	r
FiberOptic – data converter FiberOptic FO $IN \rightarrow RS$ 422 OUT resp. TTL OUT	
FiberOptic – current converter/distr. FiberOptic FO IN $\rightarrow$ 4xDCF OUT	

	Multi Signal Converter
Power input: DC IN	
Input voltage	nom.24VDC, 12-60V ±10%
Max input current consumption	50mA / with option FO: 100mA
Typical current consumption	10mA / with option FO: 50mA
Internal fuse	200mA (self-healing)
Power outputs:	
Output voltage (DC OUT)	equal to DC IN
GNSS receiver DC out (SUP ANTENNA)	equal to DC IN, limited to 30V
Reference Output (REF - SIG IN)	approx. 2.5VDC (high impedance 50 k $\Omega$ )
SIG IN input:	
Signal input (SIG IN: +/GND or -/GND)	>2.5V - 24VDC against GND (<1mA)
Signal input (SIG IN: differential + / -)	3-6V (<1mA)
Option: Fiber Optic Input (FO IN)	Multimode 820nm / ST Port
ANTENNA input:	
DCF (current loop) U <sub>loop</sub>	equal to DC IN, limited to 30V
DCF (current loop) I <sub>loop</sub>	limited to 30mA
DCF Signal current level	6mA ±10%
Outputs:	
DCF outputs (DCF OUT)	4 x Opto coupler, current limited to 12mA / 3-30V
Signal output (TTL OUT)	$5V/50\Omega$ transparent, inverted or differential
Option: Fiber Optic Output (FO OUT)	Multimode 820nm / ST Port / up to 2.7km
Signal propagation delay:	
Delay SIG IN -> TTL OUT	25ns
Delay DCF ANTENNA -> DCF OUT	1us
Delay cascading	25ns
Frequency ranges:	
SIG IN and FO IN	1Hz – 10MHz
DCF ANTENNA	current signal (current loop): 0 – 10MHz
DCF OUT	current signal (current loop): max. 500kHz
	voltage signal (open collector): max. 50kHz
Technical parameters:	
Temperature range	-20 +70°C
Dimensions L x B x H	94mm x 94mm x 60mm
Mounting	DIN rail 35mm
Weight	200g

# 8 Dimensions





Headquarters/Production Sales Worldwide	MOSER-BAER AG   Spitalstrasse 7   CH-3454 Sumiswald Tel. +41 34 432 46 46   Fax +41 34 432 46 99 moserbaer@mobatime.com   www.mobatime.com	
Sales Switzerland	MOBATIME AG   Stettbachstrasse 5   CH-8600 Dübendorf Tel. +41 44 802 75 75   Fax +41 44 802 75 65 info-d@mobatime.ch   www.mobatime.ch	
	MOBATIME SA   En Budron H 20   CH-1052 Le Mont-sur-Lausanne Tél. +41 21 654 33 50   Fax +41 21 654 33 69 info-f@mobatime.ch   www.mobatime.ch	
Sales Germany/Austria	BÜRK MOBATIME GmbH Postfach 3760   D-78026 VS-Schwenningen Steinkirchring 46   D-78056 VS-Schwenningen Tel. +49 7720 8535 0   Fax +49 7720 8535 11 buerk@buerk-mobatime.de   www.buerk-mobatime.de	