

Installation Manual

Outdoor Clock, single- or double-sided, with LED – illumination



For safety reasons avoid looking directly into the LEDs.

Before the installation of the clock please read this manual carefully.

1. Notes to this Installation manual

- The information in this installation manual can be changed at any time without previous notice.
- This installation manual has been composed with utmost care, in order to explain all details in respect of the operation of the product. Should you, nevertheless, have questions or discover errors in this Manual, please contact us.
- We do not answer for direct or indirect damages, which could occur through incorrect use of this manual.
- Please read the instructions carefully before setting-up of the product. Use the product only once you have correctly understood all information for the installation and of the operation.
- The installation must only be carried out by a skilled person.
- It is prohibited to reproduce, to store in a computer system or to transfer this publication in a way or another, even part of it. The copyright remains with all the rights with and MOSER-BAER AG – CH 3454 Sumiswald / Switzerland and BÜRK MOBATIME GmbH, D-78026 VS-Schwenningen / Germany.

2. Handling instructions

- The clock must be transported upright in its original packaging and has to be stored dry.
- Clean the cover glass with wet (leather-) cloth.
- Never use solvents, aerosol or organic cleaning products.
- The housing can be cleaned with standard cleaning agents.


3. Electrical connections



The mains supply line may only be installed by a licenced electrician. The nationally valid installation regulations must be complied with.

- The clock does not contain a power plug. In the on-site supply line for movement and illumination, an all
 wires disconnecting device and a fuse according to the consumption is to provide. Use the same phase
 (nom. 230 VAC).
 - Maximum wire cross section of 2.5 mm² shall be used.
- For all maintenance and cabling work, the clock has to be separated from the mains power supply.

4. Clock wiring overview

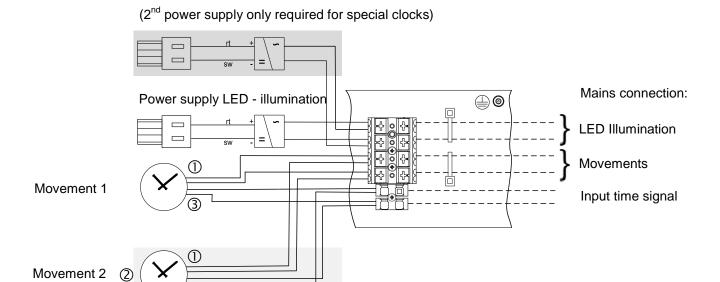

- ① 230VAC (only for movements with mains power-supply)
- 2 Movement 2 (only in double-sided clocks)
- 3 Time signal (not used for NTP clocks)



The internal wiring must not be modified.

5. Customer connections


Mains connection

A cable attachment for power supply is provided inside the clock. Protected earth has to be connected to the labelled grounding bolt (PE).

For phase and neutral wires a four-pin terminal is available. Dismantle the insulation of the connecting wires to a length of 10 to 11 mm. Insert the wires up to the isolation in to the spring terminal and clamp them be using the contact pusher.

Phase and neutral wires must be kept together close to the terminal, using cable ties.

Detail of mains connection on mounting plate:

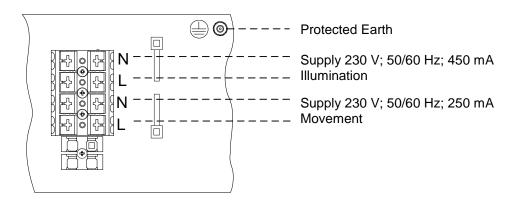



• Time signal connections

A cable attachment for time signal is provided inside the clock. Dismantle the insulation of the connecting wires to a length of 8 to 9 mm. Insert the wires up to the isolation in to the spring terminal and clamp them be using the contact pusher.


Signal	Movement code	Type of movement
Pulse	I00I11	NU 90
MOBALine	M09 / M12	MLU 190
MOBALine / DCF-active	M15M18	SAM/SEM 100
IRIG/AFNOR	l20l21	IBU 190
Active DCF	R45R46	ADU 190

 Time signal (from Master-clock)

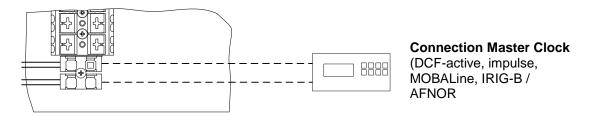

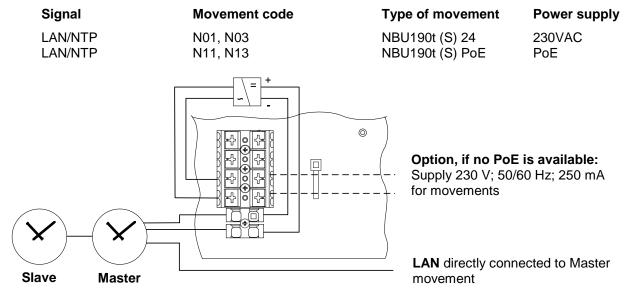

Slave movement only in double-sided clocks

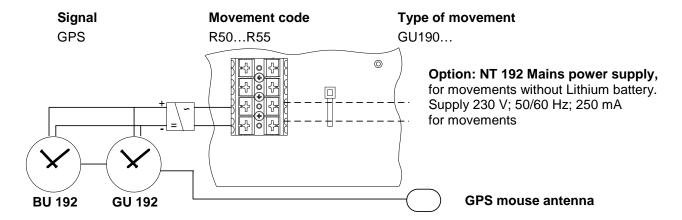

BU 192 movement only in double-sided clocks

HEADQUARTERS / PRODUCTION

MOSER-BAER AG
Spitalstrasse 7, CH-3454 Sumiswald
Tel. +41 34 432 46 46 / Fax +41 34 432 46 99
moserbaer@mobatime.com / www.mobatime.com

SALES SWITZERLAND

MOBATIME AG Stettbachstrasse 5, CH-8600 Dübendorf Tel. +41 44 802 75 75 / Fax +41 44 802 75 65 info-d@mobatime.ch / www.mobatime.ch

SALES GERMANY, AUSTRIA

BÜRK MOBATIME GmbH Postfach 3760, D-78026 VS-Schwenningen Steinkirchring 46, D-78056 VS-Schwenningen Tel. +49 7720 8535 0 / Fax +49 7720 8535 11 buerk@buerk-mobatime.de / www.buerk-mobatime.de

SALES WORLDWIDE

MOSER-BAER SA EXPORT DIVISION 19 ch. du Champ-des-Filles, CH-1228 Plan-les-Ouates Tel. +41 22 884 96 11 / Fax + 41 22 884 96 90 export@mobatime.com / www.mobatime.com

MOBATIME SA

En Budron H 20, CH-1052 Le Mont-sur-Lausanne Tél. +41 21 654 33 50 / Fax +41 21 654 33 69 info-f@mobatime.ch / www.mobatime.ch



© MOBATIME TE-801137.03