

Installation Instruction

1. General rules



The mains supply for the clock must be installed only by a licensed electrician. While the national installation regulations must be adhered.

Please provide a cable with a wire cross section of maximum 1.5 mm².

The clock is not equipped with a mains plug. An all-pole disconnecting device must be provided in the onsite supply. For movement and illumination power supply, the same power phase (nom. 230 VAC) must be used.

The fuses should be chosen according to the power consumption of the device.



For all maintenance and cabling work, the clock has to be separated from mains.



For safety reasons avoid to look directly into the LEDs.

2. Handling reference

- 1. The clock should be transported upright in its original packaging and must be stored dry.
- 2. Clean the cover glas with wet (lether-) cloth.
- 3. Never use solvents, aerosol or organic cleaning products.
- 4. The housing is to treat with standard cleaning agents.

3. Internal Connections

The internal wiring is made in the factory. It's important not to modify the internal wiring.

4. External Connections

Dismantle the insulation of the connecting wires on a length of 8 - 9 mm and insert the wires up to the isolation in the terminal. The spring terminal can be opened with a screw driver size 0.


Phase and neutral wire must be kept together close to the terminal using a cable tie.

Specifications can be changed without notice

5. Connection diagram


Connections:

Only used for double-sided clocks with a diameter of 80

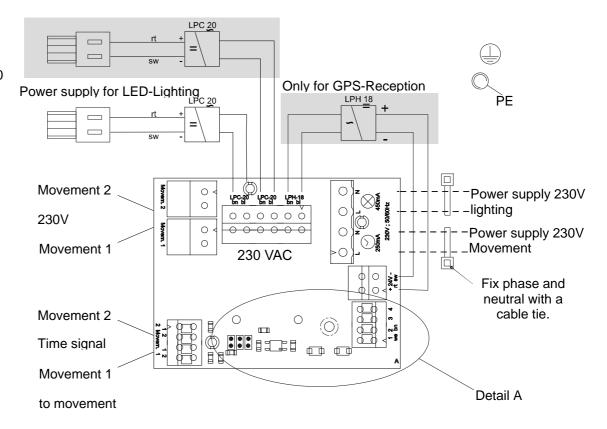


Connections (Detail A):

Time signal (MOBALine, DCF-activ, impulses or IRIG-B / AFNOR)

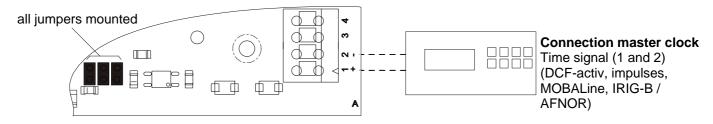

Time signal (autonomous mode with a DCF-Antenna)

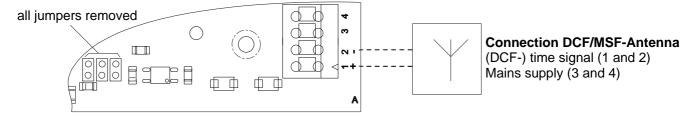

Time signal (autonomous mode with a GPS-Antenna)

